

# DUAL ARM BOOM STAND INSTRUCTION



## THE PARTS LIST

1. Base
2. Vertical post
3. Base tight screw
4. Safer Ring
5. Dual Arm Bar
6. Tight Screw
7. Tight Screw
8. 5/8" Adapter

If missing any parts, please contact the manufacturer or local dealer.

**STEP 1** Open the Boom Stand box, checking the package contents.



**STEP 2** Use the Screw 3, to attach the Base 1 and the Vertical Post 2 together, and put it on the table.



**STEP 3** Put the Safer Ring 4 on the vertical post



**STEP 4** Put the Dual arm bar 5 on to the Vertical post.



**STEP 5** Tight the left side of the Screw 6.



**STEP 6** Tight the right side of Screw 7, then dual arm bar in the right position



**STEP 7** Put the 5/8" adapter in the end of the Dual arm bar.



**STEP 8** Tight the screw on of the 5/8" adapter



**STEP 7** Put the Cap 8 on the top of the vertical post.



## SPECIFICATIONS

Weight: 38.25lbs, 17.35kg

Size of base: 11.22x10.236x0.709" (285x260x18mm)

Maximal size from vertical post to the front of base: 9.38" (238.25mm)

Horizontal bar: 20.866" (530mm), Diameter: 0.787" (20mm)

## ATTENTION

You may receive the different model of the Stands according your order, please check the bellow

Note: The stands of specifications are consistent with standard Dual Arm Stand.

Please take the same of instruction for the installation, if any questions, please call the manufacture or the local dealer.

### Clamp Dual Arm Stand

Maximal open size of clamp: 1.575"  
(40mm) Weight: 21.17lbs, 9.6kg



### U Base Dual Arm Stand

Base Dimension(L x W x H): 450x360  
x30mm. Weight: 14.95lbs, 13.46kg



### Big Base Dual Arm Stand

Size of Base: 15.512x14.961x0.472"  
(394x380x12 mm) Weight: 39.35lbs,  
18.95kg



## STAND ACCESSORIES

We also supply the other accessories to fit your application (note: the items are not including in the boom stand package)

### 76mm / 83mm / 85mm E-Arm



### 39mm E-Arm



### Fine focus E-Arm



### B&L E-Arm



### CCD Mounting Plate



### CCD Mounting Plate with Focus



### 76mm Through Hole Focus Rack



### 32mm / 25mm Arbor



## HOW CAN ATTACHED THE STANDARD E-ARM

On the top



On the horizontal



On the bottom. Warring: please use the safety screw when you put the E-Arm on the bottom of the hole.



Howard Electronic Instruments, Inc. Address: 974 SE Pioneer Road. El Dorado, Kansas 67042

Tel: 1-800-394-1984 Fax: 316-321-2803 Website: [www.heiscope.com](http://www.heiscope.com) Email: [sales@heiscope.com](mailto:sales@heiscope.com)