

# Pneumatic Arm Instruction Manual

**Attention:** This Instruction Manual is for different models of arms.

Please call the local dealer for any missing part and problem.



## Step 1.

Open the package and check the parts

1. Clamp
2. Arm
3. Locking Screw
4. Focus Scope Holder



## Step 2.

Put Clamp 1 on the side of the table and tighten the clamp.



## Step 3.

Insert Screw 3 inside the hole of the clamp.



## Step 4.

Put Arm 2 on Screw 3, and fasten the screw from the top, and cover the hole with a cap.



## Step 5.

An adjustable screw is on the rear side of the clamp. Fasten the screw to tighten the arm.



**Step 6.**

Put Focus Scope Holder 4 in the front of the Arm. Slide down the holder and tighten the two top screws, then slide up the holder and tighten the two bottom screws.



**Step 7.**

The adjustable screw at the end of the Arm is for adjusting the degree of tightness depending on the weight to be put on the front part of the scope holder.



**Attention:** When lower level position is required for the arm, push the arm down to the position first, and then pull up the E-Arm while pushing down the end of the arm to keep the focus holder at level position.

